



Modular phone plug



1 } NO CONNECT
 2 }
 3 }
 4 }
 5 } NO CONNECT
 6 }

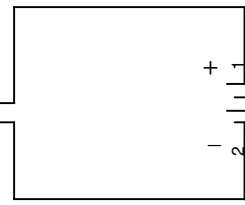

BT1 9V BATTERY

Modular phone plug wiring

1	1	WHT	<p>Pin 1 is identified by looking at the connector with the cable exiting to the right and the locking pin facing upward. Pin 1 is the top pin and pin 6 is the bottom pin.</p> <p>Either 2 or 4 or 6 wire Modular connector may be used.</p>
2	2	BLK	
3	3	RED	
4	4	GRN	
5	5	YEL	
6	6	BLU	

Title		
9V Battery wiring for show remote		
Size	Document Number	Rev
A	<Doc>	2.0
Date:	Thursday, February 12, 2004	Sheet 1 of 1